



1

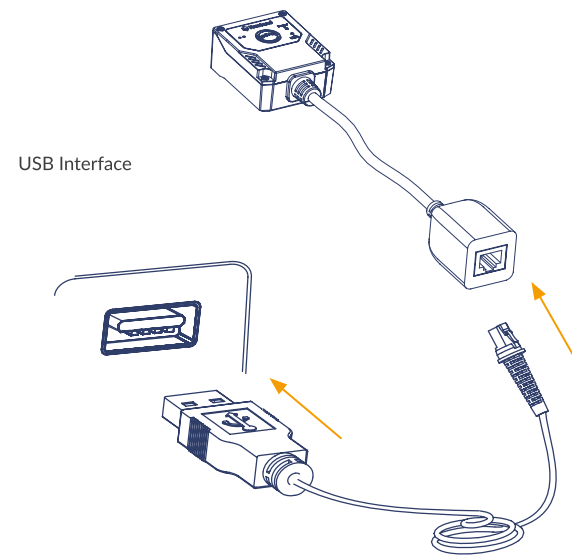

Note: The host refers to a PC, POS, or other terminal equipment.

2

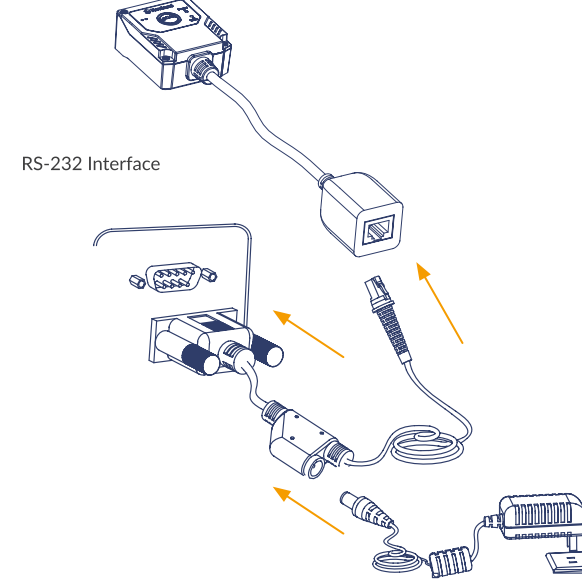


3

4

Sense scan mode (default)

- 1 Connect the scanner to a host with the cable. Then the scanner will be powered on.
- 2 Position the barcode on mobile phone screen or paper in the center of the scan window.
- 3 For a good read, the green good read LED on the scanner will flash once.

Barcode programming

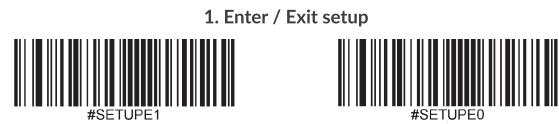

** Exit setup / Enter setup



Restore all factory defaults




** Power-on beep on / Power-on beep off



** Good read beep on / Good read beep off

5

Barcode programming

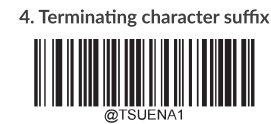

** Enable terminating character suffix



Disable terminating character suffix



** Set terminating character suffix to CR (0x0D)



Set terminating character suffix to CRLF (0x0Dx0x0A)

Note: Asterisks (**) indicate factory default values.

6

Troubleshooting

When the scanner is not working, please:

- 1 Ensure that all cable connections are secure and that only the supplied cables are used.
- 2 Ensure that the screen backlight is on when reading digital barcodes off a mobile phone and that the barcode is not defaced when reading it on paper. Wrinkled, soiled, or torn barcodes might be unreadable.
- 3 Ensure that the barcode type is enabled.



Visit our website
newland-id.com



FM430
Barracuda

